


155

TO LINK
 Press and quickly release LINK button on Transmitter.
 All unlinked receivers in range will be detected and paired.
TO UNLINK
 Unlink one: on the Receiver, press and hold LINK button for more than 3 seconds to unlink it from a Transmitter.
 Unlink all: on the Transmitter, press and hold LINK button for more than 3 seconds to unlink all of its Receivers.

TX protocol selection
 Press FUNCTION shortly 3 times, then press and hold the button for 5 seconds to enter TX mode selection. LED will blink in different patterns to indicate selected protocol.
 One flash then a pause - W-DMX G3 mode
 Two flashes then a pause - W-DMX G4S mode
 Three flashes then a pause - CRMX mode
 Press button to toggle mode, then press and hold button for 5 seconds to store the selection.

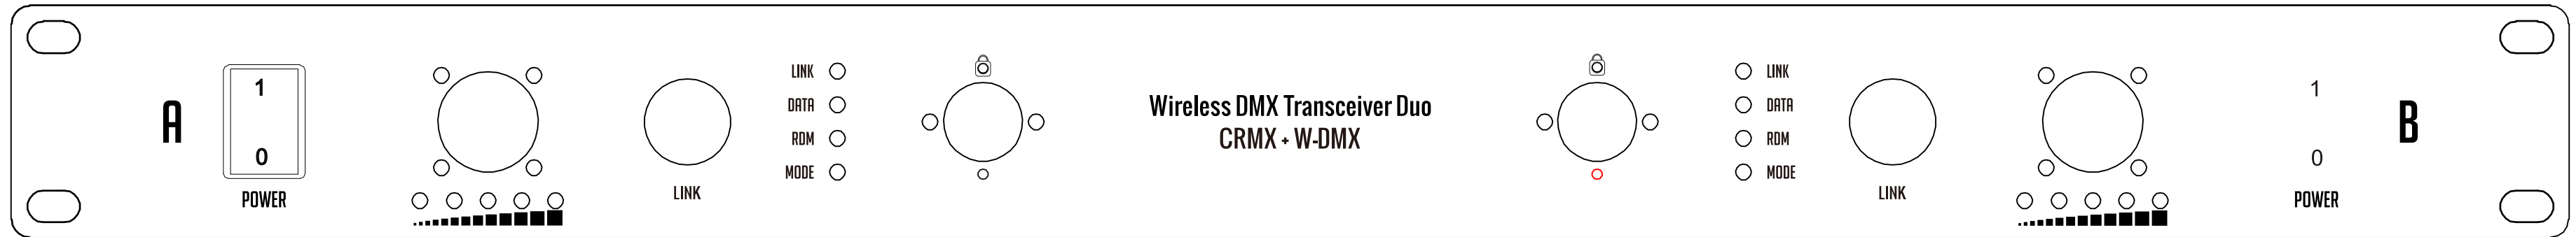

44

482