


# PIRAMIDBAT

---

3×3W LED Battery powered luminaire

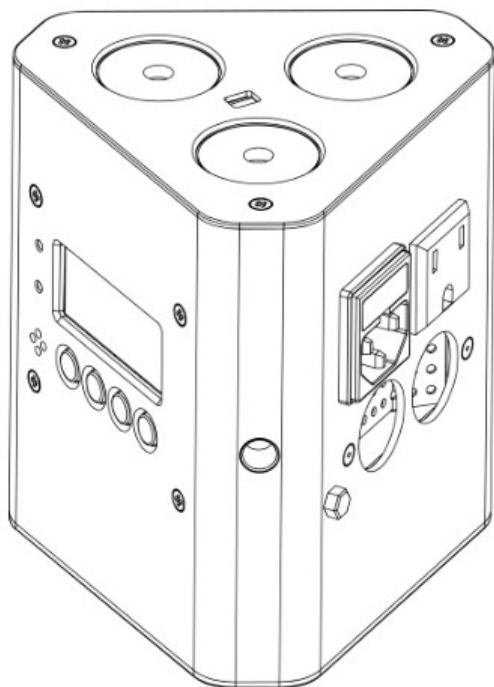

**USER MANUAL**

# 1. SECURITY TIPS

**WARNING!!! To reduce the risk of fire, electric shock, or injury to persons, follow these important safety instructions:**

- non-professionals, not to disassemble the light arbitrarily and lighting accessories inside.
- rated voltage range: AC110V-120V/60Hz or AC200V-240V / 50HZ (to be selected).
- not beam irradiate the flammable materials, flammable materials and the lamp should be maintained at least 1M over the distance.
- lamps used in ambient temperature: -15 °C -40 °C, the highest temperature of the surface of the lamp: 60 °C.
- to keep away from the liquid substance and humid environment.
- before using the lights must ensure the good grounding, can not install charging and remove any parts.
- the installation of lamps, must be fixed screw fasteners with additional security cable and regular inspection.
- lamps consecutive working hours is not recommended more than 10 hours.
- should stop using the lights in time when happens unusual conditions during the process
- lamp parts of the rotation, external accessories and paste parts should be regular inspected, such as the emergence of loose and rock, should be reinforced in a timely manner to prevent the accident.
- lamps adopt strong winds to refrigerate, it is easy to accumulate the dust, so you have to clean it weekly especially the cooling air opening, otherwise the dust will plug leading to poor light

## 2 TECHNOLOGY REFERENCE

Power Supply: AC 100-240V/50-60Hz

Power consumption: 10W

Light source: 3pcs\*3w LED RGB 3in1 mixing color

Beam Angle: 10/25 degree

Dimmer: 0-100% dimmer

Strobe rate:0-24HZ

Working Environment: -20°C-40°C

IP rate: IP20

DMX Channels: 7 channels

Control Mode: DMX512,Master-slave,Sound,Auto ,remote

Remote: IRC remote

### **Battery information:**

Battery type: Lithium Ion

Battery Charge Time: 6hours(full power)

Battery Life: (all on) 8hours, (single Color) 24hours

Battery Power:12 V, 6Ah

IEC power In/Out(charging)

DMX control, 3pin In/Out


### **Indicator light:**

Charging: Red

Charging full: Green

Using/Turn off: still on Green (control by battery)

### 3 Board Instruction

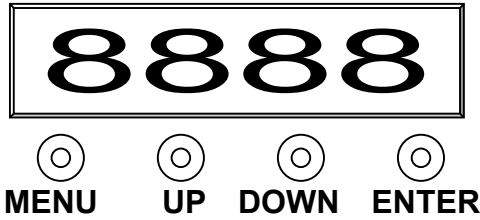

#### Operate Menu

No.	Display	Function
1	D001	Address (01-512)
2	CC01-CC64	Color selection, select different color by up and down
3	RB01-RB16	Color gradual change, from slow to fast by up and down
4	PL01-PL16	Color Pulse change, from slow to fast by up and down
5	SD01-SD16	Color Jump change, from slow to fast by up and down
6	FL01-FL16	Flash, from slow to fast by up and down
7	Sound	Sound effect
8	R000-R255	Red color, dimmer from dark to bright
9	G000-G255	Green color, dimmer from dark to bright
10	B000-B255	Blue color, dimmer from dark to bright

## 4 DMX CHANNEL SHEET

### 7CH mode

CH	Value	Function
1	0-255	Master dimmer from darkness to brightness
2	0-255	Red from darkness to brightness
3	0-255	Green from darkness to brightness
4	0-255	Blue from darkness to brightness
5	0-255	Strobe from slow to fast
6	0-255	0—10: No function 11—60: Color selection(color controlled by CH7) 61-110: Color gradual change, speed controlled by CH7 111-160: Color Pulse change, speed controlled by CH7 161-210: Color Jump change, speed controlled by CH7 211—255: Sound
7	0-255	Color selection of CH6(11-60 value) Speed control of CH6(61-210 value)

## 5 FIXED EQUIPMENT

Please fasten the fixture clamp before hanging. The clamp can be fasten by the little hole in the middle of the bracket, then tie with a safety belt. The loading capacity of the safety belt should be 10 times than the weight of the fixture itself.

## 6 CONNECTION OF DMX-512 AND CONNECTION WITH THE LIGHT EQUIPMENT

Please connect XLR-XLR control wire with every light from the output of DMX.

XLR connection :

DMX-OUTPUT




Pin 1: Screen  
Pin 2: Signal -  
Pin 3: Signal +

DMX-INPUT



Pin 1: Screen  
Pin 2: Signal -  
Pin 3: Signal +

ATTENTION: Please do remember to connect one circle circuit plug on the output signal of last equipment. And this circle circuit plug was connected a 120ohm resistance between terminals 2 and 3 of the CANON plug, connect this circle circuit plug can avoid the signal flash phenomena of signal DMX512 during the transmission.

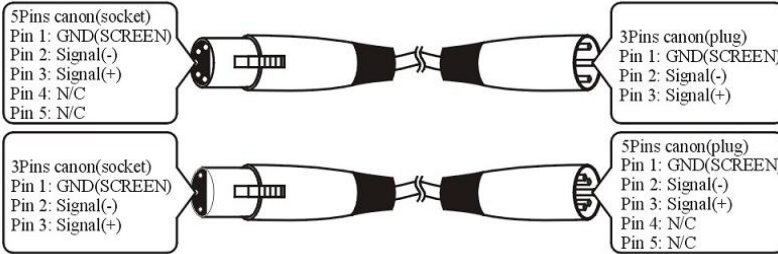

## 7 Maintenance

Problems	Check list	Trouble Shooting
The fixture do not work	<ol style="list-style-type: none"> <li>1. If your power as same as the input of the machine.</li> <li>2. If the fuse was broken.</li> </ol>	<ol style="list-style-type: none"> <li>1. Make sure the voltage.</li> <li>2. Replace the same fuse.</li> </ol>
LED dimmed	If your power us same as the input of the machine	Make sure the voltage input.
No DMX input	<ol style="list-style-type: none"> <li>1. If the polarity is opposited in the DMX controller.</li> <li>2. If it is in DMX mode.</li> </ol>	<ol style="list-style-type: none"> <li>1. Correct the DMX polarity.</li> <li>2. Change to the DMX</li> </ol>

	3. If there are 2 Master in a loop.	mode. 3. Set one piece into Slave mode.
Par Light Set works abnormality	1. Check if the serial is correct on the Par Light display	1. Set the right serial No on the single Par Light

## 8 AFTER SERVICE

1. Our company offer technical consultation to customers for ever.
2. If the machine is wrong and need repairmen, please truthfully fill in the related content and feedback us the problems timely, as well as we have to improve the product.
3. In addition to the lamp, also matching accessories are as follows:  
**accessories:** Power line 1 piece      **Optional parts:** (customers )



## Warranty Card

Name	Model	Production	Purchase
------	-------	------------	----------

End User
Company Name:
Add:

Sale Store	
Link man:	Stamp
Tel:	

Description: These must be truthfully fill, seal by the end-user and point-of-sale, or else the warranty will not work (warranty period and terms, see the following)

warranty period: one year since purchase warranty terms: 1、 If fail when using the product in normal state, you can made under the provisions of the warranty, show the warranty card and purchase bills(copy), and enjoy free maintenance service in a specific service center or the manufacturer.

2. The following will be the implementation of paid service:

- (1)Without the effective warranty card
- (2)There's blank, alter and no point-of-sale name
- (3)Fail caused by unresistance
- (4)Fail caused by transportation or unloading
- (5)Fail caused by not operate by manual
- (6)Fail caused by disassemble without unauthorized
- (7)Fail caused by using the unauthorized control system

### Note:

Based on our company continue to improve the product, the statement containing data may have changed, and will not notice the change any more. Company retains its right to change specifications related when product is improved. Thanks for your understanding.